



Water Filter Systems

Improves ice and beverage quality, optimises equipment performance and service life

- Sediment and chlorine reduction improves water & ice quality to enhance beverage appearance and taste.
- Reduces hardness scale to protect and extend equipment life.
- Sanitary quick change design – easy to use and hygienic to change filter cartridges.
- Range of sizes and capacities to suit applications.
- Manufactured in USA.

Water related issues are the most common cause of ice machine problems. Frostline provide a range of quick change water filter systems to enhance ice quality and extend the performance and life of ice machines. The filter systems feature a quick change sanitary design which is not only easy to install and use, but also protects against water contamination by eliminating handling of the filter media. The filter systems are available in a range of configurations to suit all applications. Please contact Frostline for further information.

Systems			Replacement Cartridges	
Standard	Standard	High Capacity	Standard	High Capacity
FL 10 Kit Complete FL 100ctg	FL 1000 FL 100ctg	FL 2000 FL 200ctg	FL 100 FL 111 -sediment	FL 200 FL 222-sediment

Model	Description	In/Out Fittings	Use	Operating Conditions
Filter Systems				Operating Conditions Connections In/Out: 3/8" Quick connect Water Pressure range: 100 kPa – 500 kPa Temperature range: 2°C - 40°C Flow rate: < 8 lpm Dimensions FL10/FL1000 system – 390mm h x 100mm w FL2000 system – 520mm h x 100mm w FL100 cartridge – 320mm h x 100mm w FL200 cartridge – 450mm h x 100mm w
FL10	Filter Kit including FL100 cartridge, Head, Pressure limiting valve, tubing, fittings	3/8" Quick Connect	Standard	
FL1000	Standard system; FL100 cartridge, Head	3/8" Quick Connect	Standard	
FL2000	High capacity system; FL200 cartridge, Head	3/8" Quick Connect	High capacity	
Replacement Filter Cartridges				Notes Filter cartridge life: Dependent on water quality. 6 months recommended use period, 12 months maximum. Protect filter system from freezing or direct sunlight. Fit pressure limiting valve if water pressure is >500 kPa. Not for use in water that is microbiologically unsafe or of unknown quality without adequate disinfection.
FL100	Standard cartridge; Sediment, Chlorine, Scale 320mm			
FL111	Standard cartridge; Sediment only 320mm			
FL200	High capacity cartridge; Sediment, Chlorine, Scale 450mm			
FL222	High capacity cartridge; Sediment only 450mm			

Note: A pressure limiting valve (PLV) is required to be fitted prior to the filter/ice machine if water pressure is > 500 kPa. IMD can supply an easy to use quick connect PLV for this purpose.



Installation and filter change instructions

Installation

Please read instructions carefully prior to installation


- 1 The filter system is installed between the water supply point and the ice machine. The filter should be mounted on a firm vertical surface close to the ice machine and for easy access.
- 2 Suitable food grade 3/8" tube should be used to connect the standard filter system. A quick connect 3/8" fitting is supplied on the outlet of the filter. (Check system details for the exact fittings supplied)
- 3 The mounting bracket is connected to the filter head with the 4 screws provided. The mounting bracket and head should be installed in a suitable location – ensure 100mm is allowed below bottom of the installed filter cartridge to provide room for cartridge change out.
- 4 The filter cartridge is installed into the filter head by aligning the guide arrows, pushing the cartridge upwards into the head, quarter turn right to lock in the cartridge.
- 5 First Flush – A first flush is recommended to clear air from the new system. Turn the inlet water supply valve on slowly whilst holding the outlet hose into the bucket or drain. Air will be flushed through the filter in a few litres. Once the water clears, the tap can be turned off and the filter outlet hose can be connected to the inlet of the ice machine. The inlet water supply can be slowly turned on. Check for and fix any leaks.

The filter cartridge should be changed when any of the following occurs –

- 1 The filtered water flow reduces substantially
- 2 Taste/Odour occurs in the filtered water
- 3 The maximum service period expires

Filter changeout instructions

- 1 Turn off water supply to the filter system. Vent pressure if possible. Hold and turn the filter cartridge a quarter turn to the left, pull down and remove the cartridge. Be careful as residual water pressure may be present.
- 2 Take the new replacement cartridge. Line up the guide arrows on the cartridge and head and push the cartridge into the filter head and then do a quarter turn to the right which locks in the filter cartridge.
- 3 First Flush – A first flush is recommended to clear air from the new cartridge. Turn the inlet water supply on slowly whilst holding the outlet hose into the bucket or drain. Air will be flushed through the filter in a few litres. Once the water clears the inlet valve can be turned off and the filter outlet hose can be connected to the inlet of the ice machine. The inlet water supply can be slowly turned on. Check for and fix any leaks.

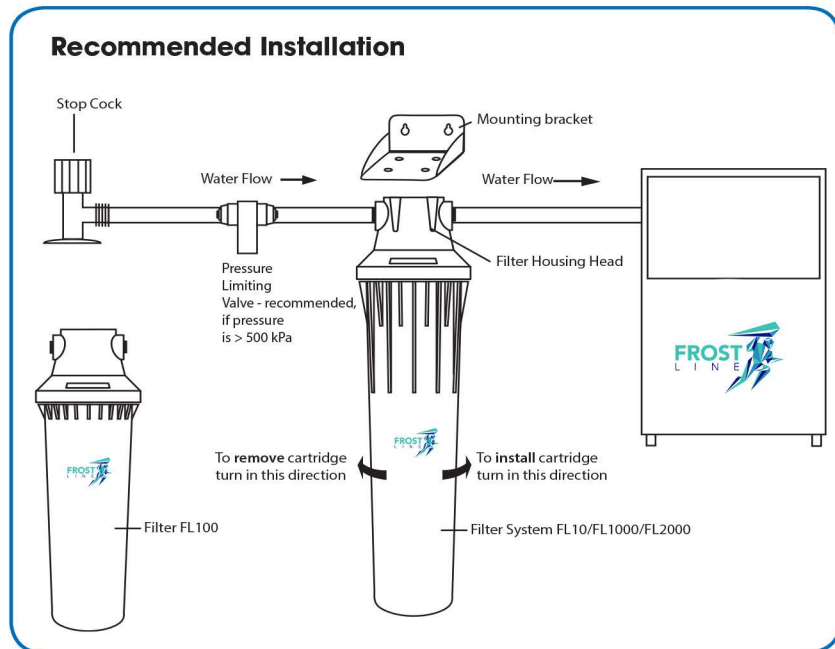


Filter Life Indicator



Each filter cartridge comes with a filter life indicator label for recommended efficient and hygienic use of the filter.

Simply adhere the label to the filter or in a convenient location, press the START button when the filter cartridge is installed and the label will measure elapsed time till the 6 months recommended use period is reached.

To Install

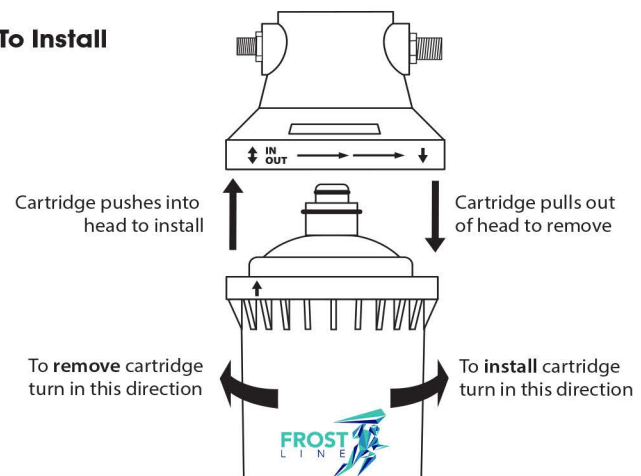

Factory 12 Sandown Square
56 Smith Rd Springvale Vic 3171

www.frostline.com.au
(03) 9562 4400